



# TALKABOUT™

WORD MESSAGE PAGER

## User's Guide



Model T340  
FLEX™ Technology

## CONTENTS

<b>Introduction</b>	
Effective Use of Your Pager .....	1
<b>Getting Started</b>	
Installing/Replacing the Battery .....	2
Controls .....	3
Turning the Pager On/Off .....	4
Sending a Test Page to Yourself ...	5
Backlight .....	6
<b>Time and Date</b>	
Setting the Time and Date .....	7
<b>Messages</b>	
Types of Messages .....	8
Choosing the Scroll Speed .....	9
Receiving/Reading Messages .....	9
Duplicate Messages .....	11
<b>Alerts</b>	
Choosing the Alert Mode .....	12
Choosing a Pleasing Alert .....	13
<b>Alarms</b>	
Reminder Alarm .....	14
General Alarms .....	15
Event Alarms .....	18
<b>Message Features</b>	
Storing Messages .....	23
Deleting Messages .....	23
Automatic Message Deletion .....	24
Locking/Unlocking Messages .....	24
Locking Messages .....	25
Unlocking Messages .....	26
<b>Information Services</b>	
Reading Information Service	
Messages .....	27
Turning the Alert On/Off .....	29
Deleting an Information Service	
Message .....	29
<b>Phone Directory</b>	
Entering a Phone Directory	
Entry .....	30
Adding a Received Message .....	33
Deleting a Phone Directory	
Entry .....	34
<b>Optional Features .....</b>	<b>34</b>
<b>Special Pager Displays .....</b>	<b>40</b>
<b>Use and Care .....</b>	<b>41</b>

Congratulations on purchasing the Motorola® Talkabout™ T340 Word Message Pager. The Talkabout T340 Word Message Pager incorporates the latest in paging technology. Motorola FLEX™ protocol-based pagers offer extended battery life and improved reliability.

This compact pager combines messaging and time keeping functions in a package that is convenient to carry. Full understanding of what this product offers begins with reading this user's guide.

This user's guide includes a detachable Quick Reference Card on the back cover.

### Effective Use of Your Pager

Your pager can help you keep in contact with everyone important to you. By giving your pager number to your business associates, family, and friends, you can be contacted when necessary.

If you have a cellular phone, give your pager number instead of your cellular number. Then you can decide who to call back on your cellular phone without paying for incoming calls.

## INTRODUCTION


### Battery Information

Your Talkabout T340 Word Message Pager operates with one AAA-size alkaline battery. Carbon zinc batteries are not recommended.

#### Installing/Replacing the Battery

**Note:** Turn the pager off before changing the battery to save messages.

- 1 Turn off the pager. Refer to "Turning the Pager On/Off" on page 4.
- 2 Slide the Lock/Unlock tab away from the battery door to unlock the door. Hold the pager in both hands and slide the door until the locking tabs release and the Battery Door Alignment Dots align. Lift the door until it is free of the housing. Remove the battery.
- 3 Align the new battery matching the illustration on the inside of the battery chamber. Insert the battery.
- 4 Replace the battery door by aligning the grooves on the door with the grooves on the housing.
- 5 Slide the battery door until it is fully closed. Lock the battery door by sliding the Lock/Unlock Tab on the housing toward the battery door.

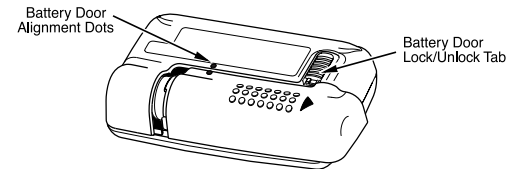

## GETTING STARTED

## Controls



- The Mode button can be pressed repeatedly (or pressed and held) to scroll through available choices and to increment a value.
- The Select button is used to select and confirm a value.
- The Read/Power On button is used to read a message, to save a setting, to turn on the pager, or to turn on the backlighting.

3

GETTING STARTED

## Turning the Pager On/Off

### To Turn On

- 1 From the OFF mode, press .
  - This Startup screen displays momentarily and the pager either alerts audibly or vibrates.  
**Note:** The Startup alert can be skipped by pressing .
- 2
  - The Standby screen displays the time, date and the AUDIBLE alert icon (or VIBRATE alert icon ).
- 3

4

GETTING STARTED

### To Turn Off

- 1 From the Standby screen, press and release until CONTROLS? displays. Press to enter the CONTROLS menu.
- 2
  - Press to set the pager to OFF mode.
- 3
  - The OFF screen displays without any alert icon.

## Sending a Test Page to Yourself

It's a good idea to test your pager and service by sending a page to yourself. Start by using the phone number, web site or email address (and PIN, if required) your service provider gave you, then enter a short message.

If you are sending a word message from a phone, an operator will assist you; otherwise press the phone buttons to enter a numeric message or type a message and send it.

5

GETTING STARTED

While you are waiting for the message to reach your pager, refer to page 9 for more information about how to read a message.

If your pager does not receive the message within a few minutes, contact your service provider. After you've tested your pager, read the rest of this guide to learn about the many useful features of your new pager.

## Backlight

Press and hold for one second or more to activate the LCD screen backlight. When you have finished reading your messages and the Standby screen is displayed, the backlight remains on for four seconds before automatically turning off.

6

GETTING STARTED

## Setting the Time and Date

- From the Standby screen, press and release until CONTROLS? displays. Press to enter the CONTROLS menu. Then press to enter TIME-DATE mode.



- Press to set the hour to the desired value.
- Move to the Minute, A.M./P.M., Date and Month fields by pressing , then press to set the value for each field.

**Note:** To display a 24-hour clock, set the AM/PM field to \_.

- Press from any field to set and exit.

7

TIME AND DATE

## Types of Messages

The message indicators define the type of message received and flash until the message is read.

Message Type	Unselected	Selected
Personal		ii
Phone Directory		
Information Services		
when received		
when selecting		
when chirp is on		

8

MESSAGES

## Choosing the Scroll Speed

You can choose the speed at which your messages scroll, or read them line by line.

- From the Standby screen, press and release until CONTROLS? displays. Press to enter the CONTROLS menu, then press to enter the SCROLL SPEED menu.



- Press to choose the SCROLL SPEED you desire.
- Press to set and exit.

**Note:** There are four scroll speeds: LINE-BY-LINE, SLOW, MEDIUM and FAST.

## Receiving/Reading Messages

When a message is received, the pager either alerts audibly (AUDIBLE, CHIRP, ESCALERT and all PLEASING modes except NO ALERT) or vibrates (VIBRATE mode).

If the NO ALERT mode is selected, no alert occurs for normal messages. The unread message indicator (normal message) flashes. The slot number of the latest message displays on top.

 
9

MESSAGES

10


MESSAGES

- Press to display the message status screen. Press to read the latest message.




**Note:** The flashing unread message indicator changes to ii when it is selected. To read a different message, press to select the message slot number, then press .

 - The first screen of the message displays. If the message is longer than one screen display, a message continued indicator appears on the top line until the last screen is displayed.




 - If the pager is set to scroll the message automatically (SLOW, MEDIUM or FAST scroll speeds) the remainder of the message is displayed at that speed.



If the scroll speed is set to LINE-BY-LINE, the remaining screens will automatically display one line at a time every few seconds.

 
**Note:** To pause the message in any scroll mode, press . Press again to continue. In LINE-BY-LINE mode, continue pressing until the last screen is displayed.



- The last screen displays the time and date the message was received. After an interval, the pager returns to the standby screen.

**Note:** If a message is unread and audible alerts are chosen, the pager gives a periodic alert until all unread messages are read. This alert will continue for up to 30 minutes. A message is considered read if any part of the message is displayed.

### Duplicate Messages

 

- If a duplicate personal message is received, the Duplicate icon displays on top.
- Press to view the duplicate message.



- The word DUPLICATE displays before the duplicate message is displayed.

## MESSAGES

11

### Choosing the Alert Mode

 
You can choose one of four alert modes: AUDIBLE, VIBRATE, CHIRP, or ESCALERT.

**Note:** In ESCALERT mode, the alert grows increasingly louder. In AUDIBLE mode you can set a PLEASING alert or NO ALERT.


- 1 From the Standby screen, press and release until ALERTS? displays. Press to enter the ALERTS menu. Press again to enter the ALERT MODE menu.



- Press until the desired alert mode displays (e.g. VIBRATE).



 - The pager gives off a sample of each displayed alert.
- Press to set and exit.



- The Standby screen displays with either (the audible alert icon) or (the vibrate alert icon), depending on which alert mode was chosen.


## ALERTS

 12

### Choosing a Pleasing Alert

If you select the AUDIBLE alert mode, you can choose the standard alert, NO ALERT, or one of eight PLEASING alerts.


- 1 From the Standby screen, press and release until ALERTS? displays. Press to enter the ALERTS menu.



- Press to enter the PLEASING alert menu.



 - Press until the desired alert mode displays (e.g. ARPEGGIO).
- The pager gives off a sample of each displayed alert. Press to set and exit.



- The Standby screen displays with the Audible alert icon .

**Note:** If you choose NO ALERT or VIBRATE, the pager gives off an audible alert only if a priority alert is received. To stop an alert, press any button.

## ALERTS

13

 
### Setting Alarms

There are three types of alarms: REMINDER, GENERAL and EVENT. If the pager is in OFF mode when an alarm expires, it turns on, alerts according to the alert mode, and remains on. If the pager is in NO ALERT mode, an alarm causes an audible alert.

#### REMINDER Alarm


A single REMINDER alarm can be set to expire within 60 minutes or less.

- 1 From the Standby screen, press and release until ALARMS? displays. Press to enter the ALARMS menu. Press again to enter the REMINDER menu.



- Press to set the alert time. In this example, the pager is set to alert 45 minutes from the time the alarm is set.

 
**Note:** When setting the alert time, the value starts with OFF, then 1 through 60, then OFF again.




- Press to set and exit.

## ALARMS

 
14



 - The Standby screen displays with the Alarm icon.



 - When a REMINDER alarm expires, this screen displays and the pager alerts. Press any button once to stop the alarm, and again to clear the message.



- If the alarm is not stopped during activation, the Alarm icon flashes. Press any button once to read the message, and press again to clear.


#### GENERAL Alarms

 You can set one GENERAL alarm. This can be set to alert on a daily basis or one-time only.


1. From the Standby screen, press and release until ALARMS? displays. Press to enter the ALARMS menu. Press to enter GENERAL alarms mode.

## ALARMS


15



 - Press , then press until (the enable alarm icon) displays. Press to move to the next field.



 
- Press until (the enable alert icon) displays. Press to move to the next field.



- Press to set the hour to the desired value, then press to move to the Minute field.
- Press to set the minutes to the desired value. Move to the A.M./P.M., Day and Month fields by pressing , then press to set the value for each field.

- Press in any field to set and exit.

 
**Note:** To alert on a daily basis set the Day and Month to --/--.




- The Standby screen displays with (the enable alert icon).

## ALARMS

 16



 - When a GENERAL alarm expires, this screen displays and the pager alerts.
- Press any button once to stop the alarm, and again to clear the message.



- If the GENERAL alarm is not stopped during activation, the ALARM icon flashes.
- Press any button once to read the message, and press again to clear.






**Note:** You can temporarily turn off a daily alert (for example, on a weekend).

#### To turn off the alert, follow these steps.

     1. From the Standby screen, press and release until ALARMS? displays. Press to enter the ALARMS menu. Press to enter GENERAL alarms mode.
2. Press to move to the alert enable/disable field.
3. Press until (the disable alert icon) displays.
4. Press to set and exit. The *alarm* remains set and turned on, but the *alert* won't occur until it is turned on again.

## ALARMS

17



#### To turn on the alert again, follow these steps.

1. From the Standby screen, press and release until ALARMS? displays. Press to enter the ALARMS menu. Press to enter GENERAL alarms mode.
2. Press to move to the alert enable/disable field. Press until (the enable alert icon) displays.
3. Press to set and exit.

#### To turn off (erase) the alarm settings, follow these steps.

1. From the Standby screen, press and release until ALARMS? displays. Press to enter the ALARMS menu. Press to enter GENERAL alarms mode.
2. Press , then press until -- (the disable alarm icon) displays. Press to set and exit.

 
#### EVENT Alarms

You can set up to three EVENT alarms. Each EVENT alarm allows you to keep a special reminder message that displays when the alarm is activated and the pager alerts. These can be set to alert either on a daily basis or one-time only.


## ALARMS

18

1 From the Standby screen, press and release until ALARMS? displays. Press to enter the ALARMS menu. Press to enter EVENT alarm mode.




2 • Press to choose EVENT alarm 01, 02 or 03.  
• Press , then press until -|- (the enable alarm icon) displays. Press to move to the next field.

 

3 • Press until (the enable alert icon) displays and press to move to the Message field.



 
4 • Press to scroll through the characters available, then press to move to the next.  
**Note:** You can enter up to 14 characters (letters, numbers or spaces). If the message is less than 14 characters long, advance to the rubout character (■) and press to fill the remaining character fields with blanks.



5 • At the last character field, press to move to the alarm Time-Date screen.

## ALARMS

 
19



6 • Press to set the hour to the desired value.  
• Move to the Minute, AM/PM, Day and Month fields by pressing , then press to set the value for each field.  
• Press in any field to set and exit.

**Note:** You can only set one EVENT alarm at a time. You must press to save each event alarm prior to setting the next alarm.

 **Note:** To alert on a daily basis set the Day and Month to --/--.




7 • The Standby screen displays with (the enable alert icon).



8 • When an EVENT alarm expires, the message displays and the pager alerts. Press any button once to stop the alarm, and again to clear the message.

## ALARMS

 20



9 • If the EVENT alarm is not stopped during activation, the ALARM icon flashes.  
• Press any button once to read the message, and press again to clear.


**Note:** You can temporarily turn off a daily alert (for example, on a weekend).

### To turn off the alert, follow these steps.

 1. From the Standby screen, press and release until ALARMS? displays. Press to enter the ALARMS menu. Press to enter EVENT alarms mode.
2. Press until the EVENT alert you want to turn off displays. Press to move to the alert enable/disable field.
3. Press until (the disable alert icon) displays.
4. Press to set and exit. The *alarm* remains set and turned on, but the *alert* won't occur until it is turned on again.

## ALARMS

21



### To turn the alert on again, follow these steps.

1. From the Standby screen, press and release until ALARMS? displays. Press to enter the ALARMS menu. Press to enter EVENT alarms mode.
2. Press until the EVENT alert you want to turn on displays.
3. Press to move to the alert enable/disable field.
4. Press until (the enable alert icon) displays.
5. Press to set and exit.

### To turn off (erase) the alarm settings, follow these steps.

1. From the Standby screen, press and release until ALARMS? displays. Press to enter the ALARMS menu. Press to enter EVENT alarms mode.
2. Press until the EVENT alarm you want to turn off displays. Press , then press until -- (the disable alarm icon) displays.
3. Press to set and exit.

## ALARMS





22

## Storing Messages

Your pager can store up to 16 personal messages. Each stored message is assigned a number that displays when the message is stored. The first message received is 1, the second is 2, and so on.

## Deleting Messages

### Deleting Messages One-at-a-Time




-  • While reading a message, press  until DELETE displays.
-  • Press  to delete.

### Deleting All Messages at Once

The DELETE ALL command deletes all read, unlocked personal messages and all information service messages. Locked or unread personal messages are not deleted.

23

MESSAGE FEATURES

-  • From the Standby screen press  until DELETE ALL? displays, then press  to delete all.

## Automatic Message Deletion

If all message slots are full and a new message is received, the oldest unlocked read message is automatically deleted.

- When the message memory is full, MEMORY FULL displays.
- If all messages are unread, the oldest, unlocked message is deleted and OVERFLOW displays.

## Locking/Unlocking Messages

By locking messages, you can protect messages from being:

 


 



 



- Deleted with the DELETE ALL function.
- Replaced when the pager's memory is full, as indicated by MEMORY FULL.

**Note:** Messages can be locked only while reading them.

24

MESSAGE FEATURES

## Locking Messages






 

 

 
-  • Press , then press  to select the message to be locked. Press  to read the message.
-  • Press and release  until LOCK?  displays.
-  • Press . The message is now locked.
-  • When a locked message is selected or read, the icon  displays on top.

**Note:** When you have locked 8 messages, LOCK FULL displays when you try to lock the next message. To lock the next message, you must first unlock one message.

25

MESSAGE FEATURES

## Unlocking Messages











-  • Press , then press  to select the message to be unlocked.
-  • Press  to read the message.
-  • Press  until UNLOCK?  displays.
-  • Press  to unlock the message.
- The lock icon disappears.

26

MESSAGE FEATURES

## Reading Information Service Messages





Information service messages are usually sent by information service providers. Information service messages are typically news or financial reports which provide information that is important for a short time (a few hours). This pager can store up to five information service messages.

- 1 
  - When an information service message is received,  flashes and the number of unread information service messages displays on the message status screen. If no key is pressed for 12 seconds, the standby screen displays. Press  to return to the message status screen.
- 2 
  - Press  to move to the message you want to read. The flashing unread message indicator  changes to  when it is selected. Press  to read the message.
- 3 
  - The first screen of the message displays. If the message is longer than one screen display, a message continued indicator  appears on the top line until the last screen is displayed.

27

INFORMATION SERVICES

 



INFORMATION SERVICES

- 4 
  - If the pager is set to scroll the message automatically (SLOW, MEDIUM or FAST scroll speeds) the remainder of the message is displayed at that speed.
  - If the scroll speed is set to LINE-BY-LINE, the remaining screens will automatically display one line at a time every few seconds.  
**Note:** To pause the message in any scroll mode, press . Press again to continue. In LINE-BY-LINE mode, continue pressing  until the last screen is displayed.
- 5 
  - The last screen displays the time and date the message was received. After an interval, the pager returns to the standby screen.

28





## Turning the Information Service Alert On and Off

You can set the pager to alert when an information service message is received.

- 1 
  - While reading an information service message, press  until CHIRP ON? or CHIRP OFF? displays.
- 2 
  - Press  to turn CHIRP ON or OFF.
 
## Deleting an Information Service Message

An information service message can be deleted with the DELETE command.

- 1 
  - While reading an information service message, press  until DELETE? displays.
- 2 
  - Press  to delete.

29

INFORMATION SERVICES




 

 


PHONE DIRECTORY

## Phone Directory

The PHONE-DIR is a reference for up to ten entries, each with a name, associated phone number and special alert. Each name can be up to eight characters long and each phone number must be from three to 13 digits long. No spaces or hyphens may be entered.

You can also set the pager to block out pages from specific numbers in the PHONE-DIR. When a new numeric message is received, it may be added to the phone directory while reading the message.

### Entering a Phone Directory Entry

- 1 From the Standby screen, press and release  until DIRECTORY? displays. Press  to enter the DIRECTORY menu. Press  to enter PHONE-DIR mode.
- 2 
  - Press  to choose the desired PHONE-DIR slot number (01 - 10), then press  to move to the next field.
  - Press  to enable (↔) the entry, then press  to move to the Name field.

30





 
- Press to select the first character, then press to move to the next.
- Repeat the above step until you have entered the entire name.

**Note:** If the name is less than eight characters long, you can use the rubout character () to fill the remaining slots with blanks. After entering the last character of the name, move to the next character and press until the rubout character () displays. Press until all remaining slots are filled with blanks.

**Note:** When selecting characters, the order in which they are displayed is A-Z, 0-9, a blank character, and then the rubout character followed by A again. If you go past the character you want, press and hold until the character displays again.



- At the last character press to move to the Phone Number screen.




- Press to select the first digit, then press to move to the next.
- Repeat the above step until you have entered the entire phone number.

**Note:** If the telephone number is less than 13 digits, advance to the rubout character () and press to fill the remaining slots with blanks. Spaces cannot be entered in phone numbers.

- At the last digit press to move to the Alert field.



 - Press to select the desired Alert (0 - 9), or "-" for page blocking.  
**Note:** The pager gives off a sample alert each time is pressed. The page blocking feature prohibits pages from the entered numbers.
- Press to set and exit.




- When a message is received that matches a PHONE-DIR number, the associated PHONE-DIR name (WENDY) displays before it.

### Adding a Received Message to the Phone Directory

 
When you receive a message that contains only a phone number, you can add that number to the phone directory.

**Note:** Any dashes, parentheses or spaces in the number are deleted before storing.

- 1 While reading a message, press until PHONE-DIR? displays and press to enter it. The phone number of the message being read is automatically assigned the next available PHONE-DIR slot. The Name field is then displayed.



 - 2 • Press to select the first character of the Name field, then press to move to the next field.  
• Repeat the above step until you have entered the entire name.




- 3 • At the last character, press to set and move to the Phone Number screen. Press to select the desired Alert (0 - 9), or "-" for page blocking.  
• Press to set and exit.

### Deleting a Phone Directory Entry

 PHONE-DIR entries are deleted when disabled. You may also edit an entry and erase the characters using the rubout characters.

- 1 From the Standby screen, press and release until DIRECTORY? displays. Press to enter the DIRECTORY menu. Press to enter PHONE-DIR mode.



- 2 • Press to select the PHONE-DIR entry you want to delete (e.g. 02 JOHN), then press to move to the Enable/Disable field.



- 3 • Press to disable (-- ) this entry, then press to delete it and exit.

### Optional Features

The Travel Clock, Travel Alarm and QuickNotes are optional features that may be available on your pager. If these features are not currently available and you would like to take advantage of them, contact your paging service provider.


#### Setting the Travel Clock

The Travel Clock (when activated) allows you to display an additional 24-hour clock in the upper left-hand portion of the display. This Travel Clock can also be


set to a different time from the main clock. This can be helpful when traveling to different time zones.

- 1 From the Standby screen, press and release until TRAVEL? displays. Press to enter the TRAVEL menu, then press to enter TRAVEL TIME mode. The Forward Time/Backward Time field (-) flashes.

- 2 To set a travel time that is different from the main clock, press to choose between forward (+) or backward (-) time in relation to the current time.

 
- 3 
  - Move to the Hour and Minute fields by pressing , then press to set the value for each field.

**Note:** To display a 24-hour clock with the same time as the main clock, set the Hour and Minute fields to zero.

- 4 
  - Move to the ON/OFF field by pressing , then press to choose ON or OFF.
  - Press to set and exit.

## OPTIONAL FEATURES

35



- The Standby screen displays with the Travel Clock time in the top left corner. This example shows a 1 hour forward time.




- This example shows a 24-hour clock with the same time as the main clock.

**Note:** When messages are received the travel clock display alternates with the number of unread messages until all the messages are read.

### Setting the Travel Alarm

 
- 1 From the Standby screen, press and release until TRAVEL? displays. Press to enter the TRAVEL menu. Press to enter TRAVEL ALARM mode.


**Note:** A Travel Alarm is set on the Travel Clock time, not the main clock time.

- 2 
  - Press until (the enable alert icon) displays. Press to move to the next field.
  - Press to set the Hour field to the desired value. Press to move to the Minute field and press to set the minute to the desired value.
  - Press from any field to set and exit.


## OPTIONAL FEATURES

36

 - 3 
  - The Standby screen displays with the icon.

- 4 
  - When a Travel alarm expires, this screen displays and the pager alerts.
  - Press any button once to stop the alarm, and again to clear the message.

 **Note:** If the pager is off when an alarm expires, it turns on, alerts and remains on.

- 5 
  - If the Travel alarm is not stopped during activation, the ALARM icon flashes.
  - Press any button to read the alarm message, and again to clear the message.

**Note:** The Travel Clock and Travel alarm display in 24-hour time only.

**Note:** You can temporarily turn off the Travel alert (for example, on a weekend).

## OPTIONAL FEATURES

37

- To turn off the alert, follow these steps.**
1. From the Standby screen, press and release until TRAVEL? displays. Press to enter the TRAVEL menu. Press to enter TRAVEL ALARM mode.
  2. Press until (the disable alert icon) displays.
  3. Press to set and exit. The *alarm* remains set and turned on, but the *alert* won't occur until it is turned on again.

**To turn the alert on again, follow these steps.**

1. From the Standby screen, press and release until TRAVEL? displays. Press to enter the TRAVEL menu. Press to enter TRAVEL ALARM mode.
2. Press until (the enable alert icon) displays.
3. Press to set and exit.

### QuickNotes

QuickNotes are short messages that can be displayed when you are paged. There are 10 QuickNotes permanently stored in the memory of the pager. The person paging you activates these messages by entering a code number instead of their phone number.

## OPTIONAL FEATURES

38

To send QuickNotes, the person paging you enters \*\*, then the message code number, and then \*\*. For example: Entering code \*\*01\*\* displays *Running Late* on the message screen. See the list of available codes below.

**Note:** QuickNotes are subject to change. See your paging service provider to verify the QuickNotes list.

When the person paging you enters this code...	this displays on the message screen.
**01**	Running late
**02**	I'm on my way
**03**	Pick me up
**04**	I'm home
**05**	Come home
**06**	Call home
**07**	Call office
**08**	Call school
**09**	I love you
**10**	I miss you

39

OPTIONAL FEATURES

SPECIAL PAGER DISPLAYS

**Special Pager Displays**

**Low Battery**

Your pager warns you if the battery level is low. If the pager is on between 8:00am and 10:00pm, **LOW CELL** [battery icon] displays and an alert sounds. Between 10:00pm and 8:00am, only **LOW CELL** [battery icon] displays (no alert sounds). If the pager is off, [battery icon] displays. Change the battery upon receiving a low-battery indication.

**Note:** Turn the pager off before changing the battery to save messages.

**Out of Range**

If your pager is equipped with this optional feature, [out of range icon] displays if you are outside your paging coverage area and the pager cannot receive messages. The out-of-range indicator [out of range icon] no longer displays when you return to your paging coverage area.

**Special Message Icons**

- If [error icon] displays at the end of the message, there is an error in the message received.
- If [long message icon] displays at the end of the message, either the message was too long, or there was not enough memory to store the message.

40

**Cleaning Your Pager**

To clean smudges and grime from the exterior of your pager, use a soft, non-abrasive cloth moistened in a mild soap and water solution. Use a second cloth moistened in clean water to wipe the surface clean. Do not immerse in water. Do not use alcohol or other cleaning solutions.

**Care and Maintenance**

Talkabout T340 Word Message Pagers are durable, reliable, and can provide years of dependable service; however, they are precision electronic products. Water and moisture, excessive heat, and extreme shock may damage the pager. Do not expose your pager to these conditions. If repair is required, the Motorola Service Organization, staffed with specially trained technicians, offers repair and maintenance facilities throughout the world.

You can protect your pager purchase with an optional extended warranty covering parts and labor. For more information about warranties, please contact either your paging service provider, retailer, or Motorola, Inc. at 1-800-548-9954. For repairs, call Motorola, Inc. at 1-800-548-9954 in the U.S. or 1-800-323-9685 in Canada. In the U.S., to contact Motorola, Inc. on your TTY, call 1-800-793-7834.

41

USE AND CARE

USE AND CARE

**Questions?**

If you have any questions about the use of your Motorola pager call 1-800-548-9954 or 1-800-793-7834 (TTY) in the U.S. If you have questions about your paging service, contact your paging service provider. For information about other Motorola products, please visit our web site at [www.motorola.com](http://www.motorola.com)

**Patent Information**

This Motorola product is manufactured under one or more Motorola U.S. patents. A partial listing of these patents is provided on the inside surface of the battery door. Other U.S. patents covering this product are pending.

42

### REGULATORY AGENCY COMPLIANCE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

43

FCC/WARRANTY

### ONE (1) YEAR STANDARD LIMITED WARRANTY AND PROVISIONS (U.S.A. ONLY)

Motorola warrants the pager against defects in material and workmanship under normal use and service for the period of time specified below. This express warranty is extended by Motorola, 1500 Gateway Blvd., Boynton Beach, Florida 33426 to the original end user purchaser only and is not assignable or transferable to any other party.

This warranty sets forth the full extent of MOTOROLA's responsibilities regarding the pager. Repair, replacement, or refund of the purchase price, at MOTOROLA's option, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY IS LIMITED TO THE DURATION CHOSEN. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE MOTOROLA PAGER, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

Motorola pagers are shipped from the factory with a standard limited warranty of one (1) year on parts and labor from date of purchase by the original end user purchaser, based on proof of purchase. In the event of a defect, malfunction, or failure to conform to specifications during the warranty period, Motorola, at its option, will either repair, replace or refund the purchase price of the pager. Repair, at Motorola's option, may include the replacement of parts or boards with functionally equivalent reconditioned or new parts or boards. Replaced parts and boards are warranted for the balance of the original warranty period. (continued)

44

FCC/WARRANTY

### LIMITED WARRANTY AND PROVISIONS (U.S.A. ONLY) continued

All parts and boards removed in the replacement process shall become the property of Motorola. This warranty does not cover defects, malfunctions, performance failures or damages to the unit resulting from use in other than its normal and customary manner, misuse, accident or neglect, the use of non-conforming parts, or improper alterations or repairs. This warranty does not cover wear and tear on covers or housings, nor the coverage or range over which the pager will receive signals.

**For information on how to receive service on Motorola pagers or covered accessories, call 1-800-548-9954 or 1-800-793-7834 (TTY). Pager warranty will be VOID if any of the following conditions occur:**

- Pagers that are incomplete such as those in which boards or components are missing and/or incompatible.
- Pagers whose serial numbers do not match on the boards, or pagers in which the board serial numbers don't match the housing.
- Pagers that have been opened by, or had work performed by, anyone other than a Motorola authorized pager service center.
- Pagers received with non-conforming or non-Motorola housings or parts.

Flat rate repair fees apply to pagers and accessories not covered under warranty.

### STATE LAW RIGHTS

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, THEREFORE THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

45

FCC/WARRANTY

NOTES

**NOTES**

**NOTES**

**Personal Numbers**

Use the spaces provided below to write down your pager and personal identification number (PIN), and the number of your service provider. Additional spaces have been provided to write down the pager and PIN of your family and friends.

Service Provider

Pager Number and PIN

\_\_\_\_\_

\_\_\_\_\_

Family and Friends

Pager Number and PIN

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_


\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_


**PERSONAL NUMBERS**



Ⓜ, Motorola, FLEX, , and Talkabout are trademarks or registered trademarks of Motorola, Inc.

© 1999 by Motorola, Inc. All Rights Reserved.

Personal Communications Sector  
1500 Gateway Boulevard, Boynton Beach, Florida 33426-8292

 RAD DEV FOR HAZ LOC INT SAFE: I,ABCD;DIV2:II,FG  
1.5 AAA ALK T3C LISTED 830H

Printed in U.S.A. 8/99



6881034B70-O

## Talkabout™ T340 Word Message Pager -- Quick Reference Card

### Symbols

	Power On Indicator		Set Event Alarm
	Set Power Off		Set Time-Date
	Set Alert Mode		Phone Directory Message Indicator
	Set Audible Alert		Alarm Message Indicator
	Set Vibrate Alert		Message Indicator Unselected
	Set Chirp Alert		Message Indicator Selected
	Set Chirp Off		Alerts
	Set Pleasing Alert		Lock Message
	Set Pleasing Alerts 1-8		Unlock Message
	Set No Alert		Delete All Messages
	Set Escalart		Delete Selected Message
	Set Alarm Mode/Set Travel Alarm		Set Slow Scrolling Speed
	Expired General Alarm		Set Medium Scrolling Speed
	Set Reminder Alarm		Set Fast Scrolling Speed
	Expired Reminder Alarm		Set Line by Line Scrolling Speed
	Set General Alarm		Set Directory
	Memory Overflow		Set Phone Directory

	Memory Full		Pager Disabled
	Silent Alert Mode Indicator		Information Service Indicator Unselected
	Audible Alert Mode Indicator		Information Service Indicator Selected
	No Alarm Indicator		Low Cell
	Alarm Indicator		Out of Range Indicator
	Duplicate Lock Indicator		Mailbox Unselected
	Lock Indicator		Mailbox Selected
	Low Cell Indicator		Disable Entry
	Message Continued Indicator		Duplicate Message
	Enable Entry		

### Setting the Time and Date

- 1 Press and release until **CONTROLS?** displays.
- 2 Press . Press and release until **TIME-DATE?** displays.
- 3 Press . Press and release repeatedly to set the hour.
- 4 Move to the Minute, A.M./P.M., Day and Month fields by pressing , then press to set the value for each field.  
**Note:** Set A.M./P.M. to \_ to display a 24-hour clock.
- 5 Press to save your changes. The Standby screen displays.

### Setting the Alarm

- 1 From the Standby screen, press and release until **ALARMS?** displays.
- 2 Press to enter the ALARMS menu.
- 3 Press to enter GENERAL alarms mode.
- 4 Press , then press until (the enable alarm icon) displays. Press to move to the next field.
- 5 Press until (the enable alert icon) displays. Press to move to the next field.
- 6 Press to set the hour to the desired value, then press to move to the Minute field.
- 7 Move to the A.M./P.M., Day and Month fields by pressing , then press to set the value for each field.
- 8 Press to set and exit.

### QuickNotes

When the person paging you enters this code...	this displays on the message screen.
**01**	Running late
**02**	I'm on my way
**03**	Pick me up
**04**	I'm home
**05**	Come home
**06**	Call home
**07**	Call office
**08**	Call school
**09**	I love you
**10**	I miss you