

**Quick Reference Card
On Back Cover**



PF1500 User's Guide

Contents

Button Use	1
PF1500 Word Message Pager	2
Getting the Most from Your Pager.....	2
PF1500 Service Levels	3
PF1500 Pager Icons	3
Pager Quick Start	6
Receiving and Previewing Your Messages	7
Reading Messages.....	8
Replying to Messages.....	9
Turning the Backlight On and Off	10
Deleting Messages from InBoxes.....	10
Using the Main Menu	11
Using Your Main Folder	11
Using Your News/Info InBox	12
Using Your News/Info Folder	14
Pager Settings	14
Setting the Alert Mode.....	14
Setting News/Info Alerts.....	15
Setting the Alarm.....	15
Setting Quiet Mode.....	16
Setting Private Time	16
Setting the Time and Date.....	17
Setting Alert Volume.....	17
Setting Key Click.....	18
Setting Transmitter Off Mode	18
Checking Vital Signs	19
Turning the Word Message Pager Off.....	19
Other Features	20
Cleaning Your Pager	21
Patent Information	21
Repair and Maintenance	21
Battery Information	22
Safety Information	24
Warranty Information.....	27

Button Use

PRESS:
Move up/
Increment
PRESS & HOLD:
Continuously
scroll/Increment

PRESS:
Move down/
Decrement
PRESS & HOLD:
Continuously
scroll/
Decrement



PRESS:
Back/Escape
PRESS & HOLD:
Backlight on/off

PRESS:
Select
PRESS & HOLD:
Menu/Action

PF1500 Word Message Pager

Congratulations on your purchase of the Motorola PF1500 word message pager. Whether receiving or responding to a message with its unique reply capabilities, the PF1500 pager can become a vital part of your business and personal life.

This booklet contains operating instructions that explain how to use your new PF1500 pager and provides helpful suggestions for first-time, as well as experienced, users. This user's guide includes a detachable quick reference card on the back cover.

Getting the Most from Your Pager

Spend a few minutes learning all of the functions and capabilities of your new pager.

- Give your pager's number to assistants, business associates, friends, and family.
- Include your pager's number on business cards and on your answering machine message.
- Leave your pager's number at your children's school and with the baby-sitter so you can always be reached in an emergency.
- Confirm your carpool arrangements and meeting times without delays and without phone calls by using your unit's reply capabilities (if service is available).

While performing procedures:

- If you do not press a button for several seconds, the unit automatically returns to the standby mode. (To continue from where you were, simply repeat the steps necessary to return to that point.)

- Your PF1500 pager uses to scroll and highlight a menu option and to select the option or to save changes and settings.
- To return to the preceding mode without accepting any option changes you may have made, press .

The Status screen can be accessed from the Main menu by pressing .

PF1500 Service Levels

The name of the service level that may appear on your PF1500 display may vary depending on your service provider (refer to your service provider for details). The level of service displayed may change at times depending on the type of coverage available in the area that you are using your PF1500 pager.

PF1500 Pager Icons

Standby Icon:

- Power on (Flashing: unread messages)

Main Menu Icons:

- Main InBox (Flashing: unread messages)
- News/Info InBox (Flashing: unread msgs.)
- Main Folder, News/Info Folder
- Delete read messages not in Main Folder
- Pager Settings
- Vital Signs
- Turn Pager Off

Message Preview and Read Icons:

- Message has been read
- Reply to messages
- Message reply in progress (flashing)
- Delete message/inbox
- Move message to folder
- Message reply was successful
- Message reply was unsuccessful
- Message contains custom reply choices
- InBox created (unread messages)
- All messages in the inbox have been read
- InBox alert selected

Status Screen Icons

- Out of Range
- Low Battery
- Audible Alert
- Vibrate Alert
- Alarm
- Private Time

Other Icons:

- Main Alert, News/Info Alert
- Set Alarm
- Quiet Mode
- Set Private Time
- Set Date and Time
- Alert Volume/Key Click
- Transmitter Off
- Next/higher value
- Preceding/lower value
- List Items Above
- List Items Below
- Move InBox Up
- Move InBox Down
- Battery Gauge
- Message Memory
- About Screen
- Back/Escape
- Yes/On
- No/Off

Pager Quick Start

Step 1: Turning the pager on:

- 1 Ensure that a fresh battery is properly installed as listed in "Battery Information" on page 22.
- 2 Press and release . The pager emits a 4-second power-up alert, the Status screen is displayed followed by the Main menu and then goes into standby mode. If you have an unread message, flashes on the Standby screen.

Note: If the pager does not turn on, see "Battery Information" on page 22.

Step 2: Setting the time and date:

- 1 Press , , or to display the Main menu.
- 2 Use to highlight Pager Settings and press .
- 3 Use to highlight Set Time & Date and press .
- 4 Use to change the hour. Press to advance to the minutes and use to set the correct time.
- 5 Press to advance to the date, use to set the correct date.
- 6 When the year has been set, press to accept changes and return to the Pager Settings menu. At any time, press to escape without saving changes.

Step 3: Setting the alert mode:

- 1 Press , , or to display the Main menu.
- 2 Use to highlight Pager Settings and press .
- 3 Use to highlight Main Alert and press .

- ④ Use **▲▼** to scroll through the list of available alert options and highlight your selection, then press **✓**. To sample an alert without selecting, press and hold **✓**.

If an audible alert is selected, **🔔** displays on the Status screen. If vibrate is selected, **🔊** displays on the Status screen. If silent is selected, an alert icon does not appear on the Status screen.

When the battery is low, alerts are shortened.

To exit without changing alert mode, press **⏪**.

You are now ready to begin receiving pages. Try sending yourself a page to verify proper operation of your pager. Then read through the rest of this guide for complete information about all of your pager's features.

Receiving and Previewing Your Messages

- When you receive a personal or information service message, the Status screen displays and the unit alerts according to the **🔔** main or news/information alert setting. A flashing **🔔** or **🔊** displays on the Main menu indicating which type of message has been received.
- To stop the alert, press any button. The **Ⓜ** on the Standby screen and **🔔** or **🔊** on the Main menu flash until you have read all received personal or news/info service messages.
- If reminder alerts were preset, the unit periodically alerts to remind you of any unread messages. The reminder alert is a chirp if the alert option was set for any audible alert or the alert is a short vibration if set to vibrate alert. The reminder alert is a chirp followed by a 1 second vibration if set to chirp and vibrate. The reminder alert is a 2 second vibration followed by a chirp if set to vibrate and beep.

7

Previewing Messages

- ① Use **▲▼** to highlight **🔔** or **🔊** and press **✓** to display a list of the first 4 messages.
- ② If you have more than 4 messages, use **▲▼** to move to any of the message listings.
 - **🔔** displays next to any message you previously previewed and read.
 - **✓** displays when a reply was successful.
 - **✗** displays when a reply was unsuccessful.
 - **🔔** displays next to any unread personal message with custom reply choices attached.

Reading Messages

If your pager has Reply capability, please refer to the Reading Message instructions presented in "Replying to Messages" on page 9

- ① To read a message (while previewing), use **▲▼** to highlight the desired message.
- ② Press **✓** to read the selected message.
- ③ Use **▲▼** to scroll through the text of a message or press **✓** to page through the message. If pre-set, the time and date displays as the last line of each message.
- ④ At the end of the message, press **✓** to move or delete the message, or press **⏪** to return to the Message Preview screen.
- ⑤ At any time, while previewing or reading, press and hold **✓** to access a pop-up menu with Delete, and Move options. If you are reading an information service message, the pop-up menu also gives you a Create InBox option (refer to "Create an InBox" on page 12).

8

Replying to Messages

If this service is available on your pager, follow the instructions below to reply to a message:

Reading Messages

- ① To read a message (while previewing), use **▲▼** to highlight the desired message.
- ② Press **✓** to read the selected message.
- ③ Use **▲▼** to scroll through the text of a message or press **✓** to page through the message. If pre-set, the time and date displays as the last line of each message.
- ④ At the end of the message, press **✓** to reply, move, or delete the message, or press **⏪** to return to the Message Preview screen.
- ⑤ At any time, while previewing or reading, press and hold **✓** to access a pop-up menu with Reply, Move, and Delete options.
- ⑥ Press **✓** to choose **🔔** Reply to Message. Your pager displays a list of pre-programmed reply messages for you to choose from.
- ⑦ Use **▲▼** to scroll through the list of pre-programmed reply messages.
- ⑧ With your reply message choice highlighted, press **✓** to send the message that you have selected. Your pager will display a confirmation message of Message Transmitting.

9

✗ flashes next to the message to indicate that the reply is in progress. If the message reply was successful, **✓** displays before the message on the Message Preview screen. If the message reply was unsuccessful, **✗** displays before the message on the Message Preview screen.

Turning the Backlight On and Off

Press and hold **⏪** until the backlight turns on. The backlight remains on until the pager times out to the Standby screen.

You can manually turn the backlight off by pressing and holding **⏪**.

Deleting Messages from InBoxes

Delete Messages While Reading

- ① At the end of each message is a Move/Delete option. (Reply/Move/Delete if reply service is available.) Press **✓** and use **▲▼** to move to **🗑** Delete Message and press **✓** again.
- ② To exit without deleting or moving the message, press **⏪**.

Deleting All Read Messages **🗑**

All read messages in the inboxes can be deleted. Messages in your Main and News/Info folders are not affected by this action.

- ① Press **✓**, **▲**, or **▼** to display the Main menu.
- ② Use **▲▼** to highlight **🗑** Delete Messages and press **✓**.
- ③ Use **▲▼** to highlight either **○** Yes or **○** No and press **✓**.

10

Using the Main Menu

Use the Main menu for the following functions:

- Access Main InBox
- Access News/Info InBox
- Access Main Folder
- Access News/Info Folder
- Delete all read messages in the InBoxes
- Change the pager settings
- Display vital signs
- Turn the pager off

From the Standby screen, press , , or to view the Main menu. Use to highlight a feature and press .

Using Your Main Folder

Use your folder to save messages. To move any message from the main inbox to the folder, press and select Move to Folder after viewing a message.

Messages in your folder can be deleted but are protected from the Delete Messages function on the Main menu and from automatic deletion when the unit's memory is full.

- 1 Press , , or to display the Main menu.
- 2 Use to highlight Main Folder and press .
- 3 If you have more than 4 messages, use to scroll through your messages.

To read a message, perform the steps under "Reading Messages" on page 8; to delete a message, perform the steps under "Deleting Messages from InBoxes" on page 10.

11

Using Your News/Info InBox

Create an InBox

Your pager provides you with the capability to create an inbox for any information service message for which no information service inbox currently exists.

- 1 Press , , or to display the Main menu.
- 2 Use to highlight News/Info InBox and press .
- 3 Use to highlight the information service message for which you want to create an inbox, then press and hold .
- 4 Use to highlight Create InBox and press .

View InBox Message History

After an information service inbox has been created, any message received at the same address/sub-address is stored in the inbox as the new current message. Your pager retains the previous messages sent to the inbox (numbered in descending order, newest to oldest), if this option is enabled.

Move an InBox Up/Down

Your pager provides the ability to position your inboxes in the order of your preference.

To move an inbox up or down:

- 1 Press , , or to display the Main menu.
- 2 Use to highlight News/Info InBox and press .
- 3 Use to highlight the information inbox you want to move, then press and hold .
- 4 Use to highlight either Move InBox Up or Move InBox Down and press .

12

Setting News/Info InBox Alerts

Your pager provides the ability to set an alert mode for each information inbox.

To set an information inbox alert mode:

- 1 Press , , or to display the Main menu.
- 2 Use to highlight News/Info InBox and press .
- 3 Use to highlight the information inbox for which you want to set an alert, then press and hold .
- 4 Use to highlight Set InBox Alert and press .
- 5 Use to scroll through the list of available alert options and highlight your selection, then press .

Deleting an InBox

- 1 Press , , or to display the Main menu.
- 2 Use to highlight News/Info InBox and press .
- 3 Use to highlight the information inbox for which you want to delete, then press and hold .
- 4 Use to highlight Delete InBox and press .
- 5 Use to highlight Yes or No and press .

If you selected Yes, the pager deletes the inbox and displays INBOX DELETED.

If you selected No, the pager displays the InBox Menu Options screen.

13

Using Your News/Info Folder

Use your news/info folder to save news/info messages. To move any message from the news/info inbox to the folder, press and select Move to Folder after viewing a message.

Messages in your folder can be deleted but are protected from the Delete Messages function on the Main menu and from automatic deletion when the unit's memory is full.

- 1 Press , , or to display the Main menu.
- 2 Use to highlight News/Info Folder and press .
- 3 If you have more than 4 messages, use to scroll through your list of inboxes/messages.
- 4 Press to select the inbox or message that you want to access.

To read a message, perform the steps under "Reading Messages" on page 8; to delete a message, perform the steps under "Deleting Messages from InBoxes" on page 10.

Pager Settings

Setting the Main Alert Mode

Your pager has a standard alert, a chirping alert, a vibrating alert, and nine pleasing alerts. You can also set the alert to Silent (no alert).

Whenever your main alert mode is set for any of the audible alerts, appears on your Status screen. appears when your main alert is set for vibrate. If silent is selected, an alert icon does not appear on the Status screen.

To set your main alert mode, see "Step 3: Setting the alert mode:" on page 6.

14

Setting the News/Info Alert Mode

Your pager provides the ability to set alert modes for information messages differently than for personal messages to distinguish between message types. You can set a unique alert for each News/Info InBox.

To set your information services alert mode:

- 1 Press **OK**, **Left**, or **Right** to display the Main menu.
- 2 Use **Left** to highlight **Pager Settings** and press **OK**.
- 3 Use **Left** to highlight **News/Info Alert** and press **OK**.
- 4 Use **Left** to scroll through the list of available alert options and highlight your selection, then press **OK**.

Setting the Alarm

The alarm can be set for either a specific time and date, or it can be used as a daily alarm.

- 1 Press **OK**, **Left**, or **Right** to display the Main menu.
- 2 Use **Left** to highlight **Pager Settings** and press **OK**.
- 3 Use **Left** to highlight **Set Alarm** and press **OK**.
- 4 The alarm enabled **On** and alarm disabled **Off** symbols indicate the status of the alarm. The alarm status can be changed when the symbol is highlighted by pressing **Left**.
- 5 Press **OK** to advance to the hour. Use the **Left** buttons to enter the hour setting.
- 6 Press **OK** to advance to the minutes setting. Use the same steps to set the minutes, AM/PM/24hr setting, and the date.

15

- 7 After all settings have been entered, press **OK** to save the changes and return to the Pager Settings menu.

- 8 At any time, press and hold **OK** to save the changes and return to the Pager Settings menu.
- 9 At any time, press **Esc** to escape without saving changes.

To set a Daily Alarm, increment the month (or day) field past 12 (or 31) to display --/--.

If an alarm is set, **On** displays on the Status screen. To silence an alarm, press any key.

To disable a previously set alarm and retain its time and date, use **Left** to change the alarm status to disabled **Off** and press **OK**.

Setting Quiet Mode

- 1 Press **OK**, **Left**, or **Right** to display the Main menu.
- 2 Use **Left** to highlight **Pager Settings** and press **OK**.
- 3 Use **Left** to highlight **Quiet Mode** and press **OK**.
- 4 The options are **On**, or **Off**. Use **Left** to make your selection and press **OK**.
- 5 If the current main alert setting is audible or vibrate, a flashing **On** displays on the Status screen. If the main alert is set to silent, an alert icon does not appear on the Status screen.

Setting Private Time

PrivateTime mode allows you to select a time period during which the pager receives messages and performs all functions, but without any audible or vibrate notification.

16

- 1 Press **OK**, **Left**, or **Right** to display the Main menu.
- 2 Use **Left** to highlight **Pager Settings** and press **OK**.
- 3 Use **Left** to highlight **Set Private Time** and press **OK**.
- 4 Press **OK** to move to the hour digit and use **Left** to set the start and end time (set hour, minute, AM/PM) that you want for private time.
- 5 Press **OK** to save your changes. To exit without saving changes, press **Esc**.

When private time is set, **On** appears on your Status screen. When private time is active, the **On** or **Off** are not displayed on your Status screen.

Setting the Time and Date

To set your pager's time and date, see "Step 2: Setting the time and date:" on page 6.

Setting Alert Volume

- 1 Press **OK**, **Left**, or **Right** to display the Main menu.
- 2 Use **Left** to highlight **Pager Settings** and press **OK**.
- 3 Use **Left** to highlight **Alert Volume** and press **OK**.
- 4 Use **Left** to set the volume. Moving the volume indicator to the left lowers the volume. Moving the volume indicator to the right raises the volume.
- 5 Press **OK** to save the setting and return to the Pager Settings menu.
- 6 To sample the alert volume, press and hold **OK**.

17

Setting Key Click

When this feature is turned on and the pager is in audible mode, a "click" is emitted whenever a button is pressed. The click is not heard when the pager is in quiet mode.

- 1 Press **OK**, **Left**, or **Right** to display the Main menu.
- 2 Use **Left** to highlight **Pager Settings** and press **OK**.
- 3 Use **Left** to highlight **Key Click** and press **OK**.
- 4 The options are **On**, or **Off**. Use **Left** to make your selection and press **OK**.

Setting Transmitter Off Mode

When this feature is turned on, the transmitter is turned off.





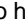



Note: When the transmitter is turned off, the pager can receive messages, however, you cannot transmit acknowledgements or replies.

- 1 Press **OK**, **Left**, or **Right** to display the Main menu.
- 2 Use **Left** to highlight **Pager Settings** and press **OK**.
- 3 Use **Left** to highlight **Transmitter Off** and press **OK**.
- 4 The options are **Yes**, or **No**. Use **Left** to make your selection and press **OK**.

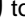
18

Checking Vital Signs

The Vital Signs feature options include displays for the current status of the battery, message memory, and information "about" your pager.

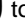



- 1 Press , , or  to display the Main menu.
- 2 Use , , and  to highlight  Vital Signs and press .

To check the battery status:

Use , , and  to highlight  Battery and press .

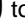



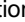
The percentage of remaining battery power is displayed.

To check the message memory status:

Use , , and  to highlight  Message Memory and press .

The amount of memory used for both personal and News/ Info message is displayed.





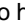





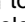

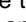
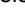
To display information about your pager:

Use , , and  to highlight  About and press .

Information about your paging unit is displayed.


Turning the Pager Off

You can turn off the unit to save battery power. (Messages stored by the system while the pager is off are received by the pager if the unit is turned back on within the coverage area.)

- 1 Press , , or  to display the Main menu.
- 2 Use , , and  to highlight  Turn Pager Off and press .
- 3 The options are  Yes to turn the pager off, or  No to leave the pager on. Use , , and  to make your selection and press .



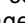
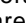
19

Other Features

Low Battery Indicator: A  displays on the fourth line of the Status screen at the onset of a low battery condition.

Message Status: If enabled, the third line of the Status screen displays text messages that indicate carrier-specific service modes. Refer to your service provider literature.

Updated Message: If your pager is configured to save messages received with errors, **UPDATED** displays at the beginning of the message when an update occurs. This display indicates that the message has been retransmitted to your pager to correct previously received errors.

Out of Range: If programmed,   displays whenever you are out of your coverage area. Upon returning to your coverage area,   no longer displays on the Status screen. Refer to "Battery Information" if your pager's internal battery is low.

Memory Full Indicator: When the pager's main message memory is full, **MEMORY FULL** displays on the second line of the Status screen.

When the pager's memory is full, the pager automatically deletes your oldest messages (read messages first, then unread messages) to make room for new messages.

To prevent a message from being automatically deleted when the memory is full, move it to your Main or News/Info folder.

20

Cleaning Your Pager

To clean smudges and grime from the exterior of the housing, use a soft, nonabrasive cloth moistened in a mild soap and water solution.

Wipe the surface using a second cloth moistened in clean water.

Do not immerse the pager in water. Do not use any other cleaning solutions.

Patent Information

This product is manufactured under one or more Motorola U.S. Patents. A partial listing of these patents is provided on the inside surface of the battery door. Other patents covering this product are pending.

Repair and Maintenance

When properly handled, your PF1500 pager is capable of many years of trouble-free service. However, if it ever requires service, contact your Service Provider or a Motorola sales office for more information.

For questions pertaining to the functions and use of your Motorola pager, please call 1-800-548-9954.

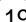
For questions pertaining to your paging service, contact your respective paging service provider.


21

Battery Information

Your pager operates with a single AA size alkaline battery (do not use carbon zinc batteries). The AA-size battery also recharges the pager's internal NiCd battery.

Two AA-size batteries are provided with your pager. The first battery you install recharges the pager's internal battery and does not last long. Use the second AA-size battery to replace the first AA-size battery.

A battery gauge is provided with the Vital Signs feature of the Main menu. Refer to "Checking Vital Signs 

on page 19. If  displays, the pager's AA-size battery is low. Replace the AA-size battery.

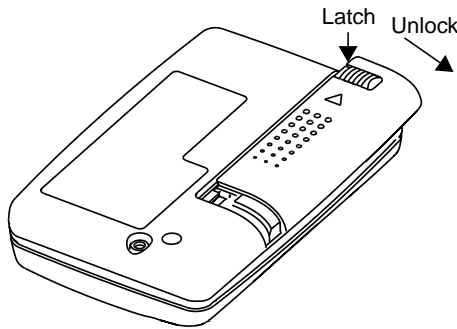 
If it has been a while since the battery was replaced, you may need to charge the pager's internal NiCd battery overnight (or for a number of hours) to ensure proper operation of your pager.

Note: This product contains a Nickel-Cadmium (NiCd) rechargeable battery that must be recycled or disposed of properly. Recycling facilities may not be available in all areas.

22

Replacing the Battery

- 1 Hold the pager face down and slide the latch toward the battery door.
- 2 Slide the battery door approximately 1/8 inch in the direction of the arrow (toward the outer edge). See diagram for battery door location.



- 3 Lift the battery door away from the housing.
- 4 Lift the battery out of the compartment taking note of the positive (+) and negative (-) markings on the battery and the pager housing.
- 5 Insert a new battery, taking note of the positive (+) and negative (-) markings on the battery and the markings on the pager housing.
- 6 Replace the battery door cover and lock the battery door latch.

CAUTION: Take note of the positive (+) and negative (-) markings. Do not insert the battery backwards or all messages will be erased.

23

Safety Information

Read this information before using a wearable two-way paging device.

First introduced in 1995, the two-way pager is one of the most exciting and innovative electronic products ever developed. With it you can stay in contact with your family, your office, information services, and others.

For the safe and efficient operation of your two-way pager, observe these guidelines:

Your two-way pager is a radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) energy.

The two-way pager transmitter operates in the frequency range of 896MHz to 902MHz, and the receiver operates in the range of 929MHz to 942MHz. It utilizes commonly used frequency modulation (FM) techniques. The unit transmits at a power level of 0.15W for short periods of time (from 0.016 to 0.160 seconds). Transmissions occur infrequently and usually follow within a few seconds of a page that has been received or when the unit is first turned on.

In 1991, the Institute of Electrical and Electronics Engineers (IEEE), and in 1992, the American National Standards Institute (ANSI), updated the 1982 ANSI Standard for safety levels with respect to human exposure to RF energy. Over 120 scientists, engineers, and physicians from universities, government health agencies and industry, after reviewing the available body of research, developed this updated standard. In March, 1993, the U.S. Federal Communications

24

Commission (FCC) proposed the adoption of this updated Standard. The design of your two-way pager complies with this updated Standard.

You may choose to turn the transmitter in your two-way pager OFF at any time. Refer to "Setting Transmitter Off Mode" on page 18.

Electronic Devices

Most modern electronic equipment is shielded from RF energy, however, RF energy from two-way pagers may effect inadequately shielded electronic equipment.

Check with the manufacturer or it's representative to determine if the following equipment or systems are adequately shielded from external RF energy:

- Motor Vehicle electronic and entertainment systems (standard and any add-on equipment).
- Medical Equipment, hospital or personal (such as pacemakers, hearing aids, etc.).

Turn your two-way pager OFF in health care facilities when any regulation posted in the areas instructs you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Aircraft

Follow these rules when around aircraft:

- Turn your two-way pager OFF before boarding any aircraft. **Do not use it while airborne!**
- To prevent possible interference with aircraft systems, use your two-way pager on the ground only with crew permission. This is a U.S. Federal Aviation Administration (FAA) regulation.

25

Blasting Areas

To avoid interfering with blasting operations, turn your unit OFF when in a "blasting area" or in areas posted "Turn off two-way radio". Construction crews often use remote control RF devices to set off explosives.

Potentially Explosive Atmospheres

Do not allow your two-way pager to be within the proximity of any potentially explosive atmospheres. It is rare, but your two-way pager may generate sparks. Two-way pagers have internal electronic circuits which may be operational even when the device is turned off or the battery removed.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked and include the following:

- Gas stations
- Below deck on boats
- Fuel or chemical transfer/storage facilities
- Areas where air may contain chemicals or particles, such as grain, dust, or metal powders
- Any area where you would normally be advised to turn off your motor vehicle.

Do not transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your two-way pager. Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

26

ONE (1) YEAR STANDARD LIMITED WARRANTY AND PROVISIONS (U.S.A. ONLY)

Motorola warrants the pager against defects in material and workmanship under normal use and service for the period of time specified below. This express warranty is extended by Motorola, 1500 Gateway Blvd., Boynton Beach, Florida 33426 to the original end user purchaser only and is not assignable or transferable to any other party.

This warranty sets forth the full extent of MOTOROLA's responsibilities regarding the pager. Repair, replacement, or refund of the purchase price, at MOTOROLA's option, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY IS LIMITED TO THE DURATION CHOSEN. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE MOTOROLA PAGER, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

Motorola pagers are shipped from the factory with a standard limited warranty of one (1) year on parts and labor from date of purchase by the original end user purchaser, based on proof of purchase. In the event of a defect, malfunction, or failure to conform to specifications during the warranty period, Motorola, at its option, will either repair, replace or refund the purchase price of the pager. Repair, at Motorola's option, may include the replacement of parts or boards with functionally equivalent reconditioned or new parts or boards. Replaced parts and boards are warranted for the balance of the original warranty period.
(continued)

LIMITED WARRANTY AND PROVISIONS (U.S.A. ONLY) continued

All parts and boards removed in the replacement process shall become the property of Motorola. This warranty does not cover defects, malfunctions, performance failures or damages to the unit resulting from use in other than its normal and customary manner, misuse, accident or neglect, the use of non-conforming parts, or improper alterations or repairs. This warranty does not cover wear and tear on covers or housings, nor the coverage or range over which the pager will receive signals.

For information on how to receive service on Motorola pagers or covered accessories, call 1-800-548-9954 or 1-800-793-7834 (TTY).

Pager warranty will be VOID if any of the following conditions occur:

- Pagers that are incomplete such as those in which boards or components are missing and/or incompatible.
- Pagers whose serial numbers do not match on the boards, or pagers in which the board serial numbers don't match the housing.
- Pagers that have been opened by, or had work performed by, anyone other than a Motorola authorized pager service center.
- Pagers received with non-conforming or non-Motorola housings or parts.

Flat rate repair fees apply to pagers and accessories not covered under warranty.

STATE LAW RIGHTS

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, THEREFORE THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Federal Communications Commission (FCC) Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Ⓜ, Motorola, FLEX and PF1500 are trademarks or registered trademarks of Motorola, Inc.



© 1998 by Motorola
All Rights Reserved.
Paging Products Group
1500 Gateway Blvd.
Boynton Beach, FL 33426-8292
Printed in U.S.A. 9/98



6881032B70-O

Setting the Alert Mode

- 1 Press **⏪**, **⏩**, or **⏴** to display the Main Menu.
 - 2 Use **⏴** to highlight **[Menu]** and press **⏵**.
 - 3 Use **⏴** to highlight **[1]** and press **⏵**.
 - 4 Use **⏴** to highlight an option and press **⏵**.
(To sample without selecting, press and hold **⏵**.)
- Checking Vital Signs
- 1 Press **⏪**, **⏩**, or **⏴** to display the Main Menu.
 - 2 Use **⏴** to highlight **[Menu]** and press **⏵**.
 - 3 Use **⏴** to highlight either **[1]** or **[2]** and press **⏵**.

Checking Vital Signs

- 1 Press **⏪**, **⏩**, or **⏴** to display the Main Menu.
- 2 Use **⏴** to highlight **[Menu]** and press **⏵**.
- 3 Use **⏴** to highlight either **[1]** or **[2]** and press **⏵**.

Setting Transmitter Off Mode

- 1 Press **⏪**, **⏩**, or **⏴** to display the Main Menu.
- 2 Use **⏴** to highlight **[Menu]** and press **⏵**.
- 3 Use **⏴** to highlight **[1]** and press **⏵**.
- 4 Use **⏴** to highlight **[Yes]**
- 5 Press **⏵** to select **[Yes]**

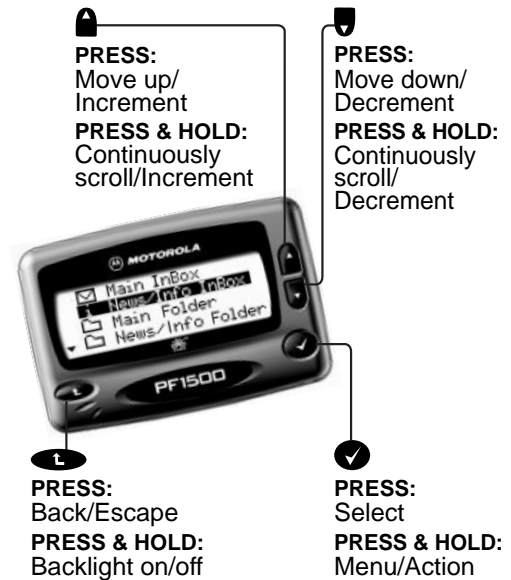 
Ⓜ Motorola, FLEX and PF1500 are trademarks of Motorola, Inc.
© 1998 by Motorola, Inc.
All Rights Reserved.



Paging Products Group
1500 Gateway Blvd.,
Boynton Beach, FL 33426-8292
Printed in U.S.A. 9/98

PF1500 Word Message Pager Quick Reference Card

Button Use



Pager Icons

Standby Icon:

- Ⓜ Power on (Flashing: unread messages)

Message Preview and Read Icons:

- ☐ Message has been read
- ↩ Reply to messages
- ↔ Message reply in progress (flashing)
- ✂ Delete message/InBox
- 📁 Move message to folder
- ✓ Message reply was successful
- ✗ Message reply was unsuccessful
- ⋮ Message contains custom reply choices
- 📁 News/Info InBox created (unread messages)
- ☑ All messages in the InBox have been read
- 📁 InBox alert selected

Status Screen Icons:

- 📶 Out of Range
- 🔋 Low Battery
- 🔊 Audible Alert
- 🔊 Vibrate Alert
- 🔊 Alarm
- 🕒 Private Time

Other Icons:

- + Next/higher value
- Preceding/lower value
- ▲ List Items Above
- ▼ List Items Below
- ⊖ No
- ⊕ Yes

Reading Your Messages

- 1 Press **⏪**, **⏩**, or **⏴** to display the Main Menu.
- 2 Use **⏴** to highlight **[Menu]** or **[1]** and press **⏵**.
- 3 Use **⏴** to highlight any message and press **⏵**.
- 4 Use **⏴** to scroll up/down through a message or press **⏵** to page down through a message.

Setting the Time and Date

- 1 Press **⏪**, **⏩**, or **⏴** to display the Main Menu.
- 2 Use **⏴** to highlight **[Menu]** and press **⏵**.
- 3 Use **⏴** to highlight **[1]** and press **⏵**.
- 4 Use **⏴** to change the hour. Press **⏵** to advance to other fields (minutes, am/pm/24hr, day, month, year) that you want to modify. Use **⏴** to set each field.
- 5 When the last field (Year) has been set, press **⏵** to accept changes and return to the Pager Settings Menu. At any time, press **⏪** to escape without saving changes.

Setting the Alarm

- 1 Press **⏪**, **⏩**, or **⏴** to display the Main Menu.
- 2 Use **⏴** to highlight **[Menu]** and press **⏵**.
- 3 Use **⏴** to highlight **[1]** and press **⏵**.
- 4 Use **⏴** to set the alarm mode to **[On]** (on) or **[Off]** (off).
- 5 Press **⏵** to advance to the hour field.
- 6 Use **⏴** to set the hour. Press **⏵** to move to other fields (minutes, am/pm/24hr, day, month, year) that you want to modify. Use **⏴** to set each field. Then press **⏵**.

To set a Daily Alarm, increment the month (or day) field past 12 (or 31) to display --/--/--.